

# Micsig AC/DC Current Probes CP2100 Series User Manual

Applies to  
CP2100A/CP2100B



---

## Safety Precautions

- The measuring circuit should be CAT II 600V or below.
- Do not measure bare conductor.
- Do not touch the conductor under test and the sensor head while measuring.
- Do not operate in wet/damp conditions.
- Do not touch the instrument or the object under test with wet hands.
- Please use this product within the scope permitted by the terminal.
- Please use this product as required.
- Please ground the product through the USB power cable.

# 1. Introduction


The CP2100 series is a current probe that can measure both DC and AC. It is a split-type design that is small and beautiful. It uses a standard BNC interface for oscilloscopes or a multi-connector for adapters. The maximum current that can be measured is 100A<sub>pk</sub> (70Arms); it is divided into 2 models, CP2100A measurable bandwidth range is DC~800KHz, CP2100B measurable bandwidth range is DC~2.5MHz, The CP2100 series current probe has two optional ranges: 10A and 100A . With automatic and manual zero adjustment, USB power supply, no additional power supply, making measurement more convenient. Often used in motor drive, power frequency, inverter, power supply, avionics and other fields.

# 2. Appearance




## 2. Specifications

Parameter	CP2100A	CP2100B
<b>Bandwidth</b>	DC~800KHz	DC~2.5MHz
<b>Rise time</b>	≤583ns	≤175ns
<b>Ranges</b>	10A/100A	
<b>Output sensitivity</b>	0.1V/A (10A) 0.01V/A (100A)	
<b>DC accuracy(typical)</b>	3%±50mA (10A) 4%±50mA (100A, 500mA~40Apk) 15% (100A, 40Apk~100Apk)	
<b>Signal delay</b>	<150ns (10A) <200ns (100A)	
<b>DC signal linearity (typical)</b>	DC signal linearity, typical on page 6	
<b>Measuring range</b>	50mA~10Apk (10A) 1A~100Apk (100A)	
<b>Maximum measurable current</b>	100Apk, 70.7Arms (DC+ACpk) 200Apk-pk, 70.7Arms (AC)	
<b>Maximum working voltage</b>	CAT III 300V CAT II 600V	
<b>Maximum float voltage</b>	CAT III 300V CAT II 600V	
<b>Maximum conductor diameter</b>	13mm	
<b>Overload indication</b>	The buzzer beeping, the button light flashing	
<b>Power supply</b>	DC 5V	
<b>Probe head size</b>	11*6.1*2.5cm	
<b>Control box size</b>	10.8*5.6*2.6cm	
<b>Length</b>	228cm	
<b>Weight</b>	290g	
<b>Single package weight</b>	1000g	
<b>Single package size</b>	29.5*23.6*5.7cm	
<b>Operating Temperature</b>	0°C ~50°C	
<b>Storage Temperature</b>	-20°C ~80°C	
<b>Operating Humidity</b>	5%~95% (0°C ~40°C, No condensation) 5%~65% (40°C ~50°C, No condensation)	
<b>Operating Altitude</b>	≤3000m	
<b>Storage Altitude</b>	≤12000m	

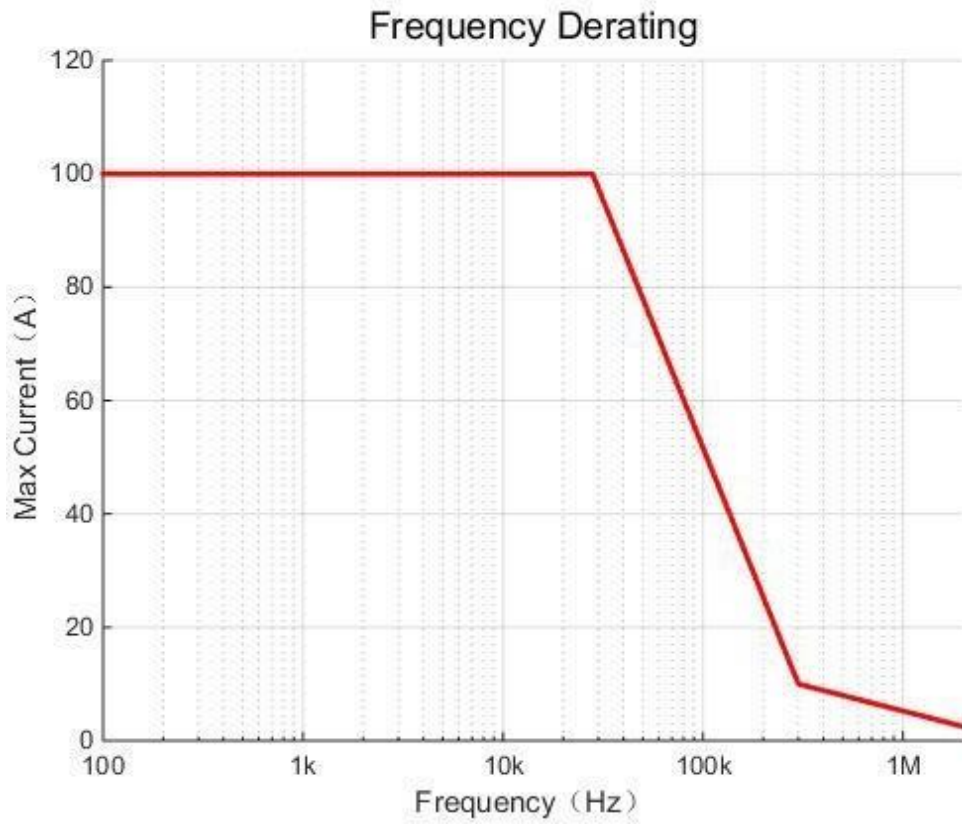


Maximum current versus frequency  
Frequency response CP2100A

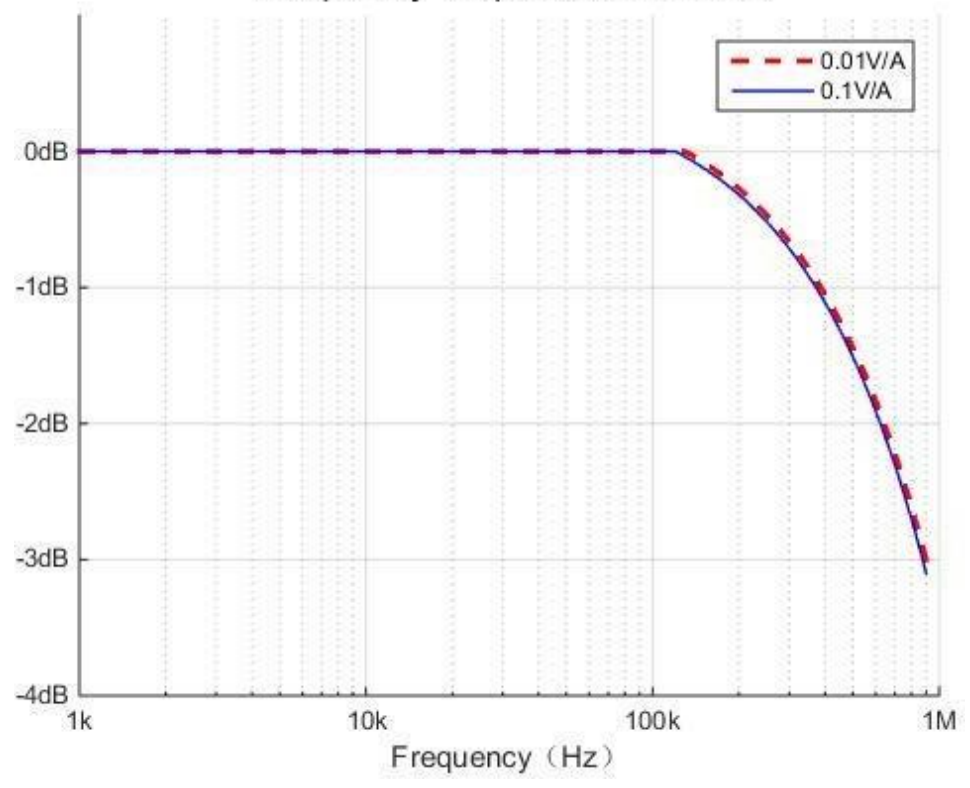


Amplitude-frequency characteristic curve -CP2100A

Frequency response CP2100B

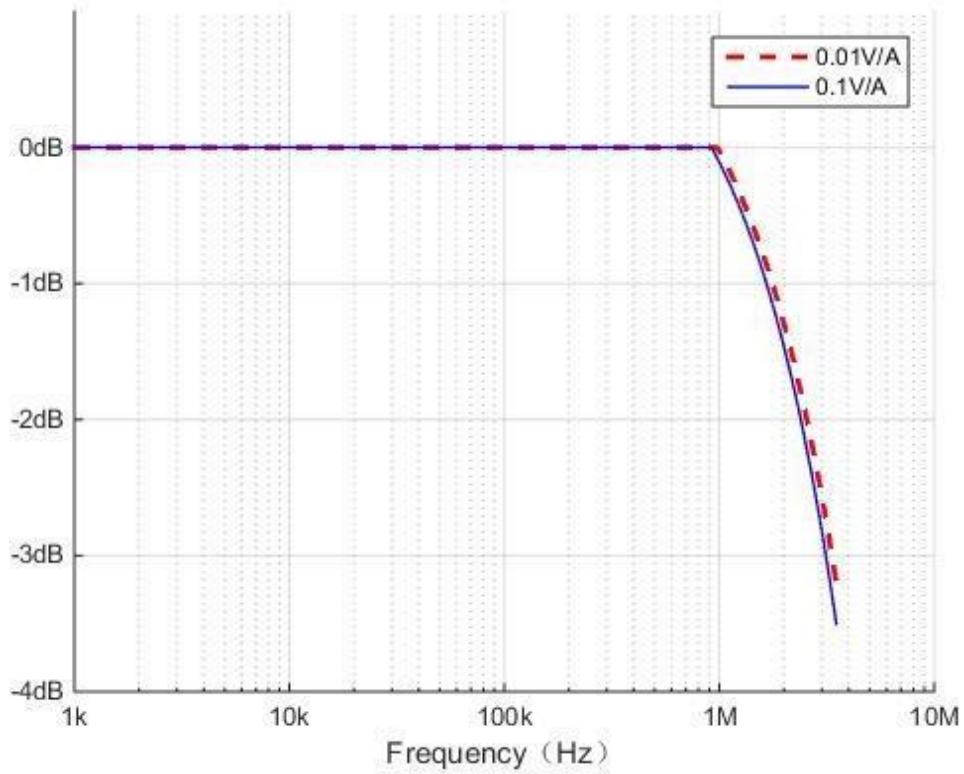

Amplitude-frequency characteristic curve -CP2100B

CP2100 DC线性度 (0.01V/A)

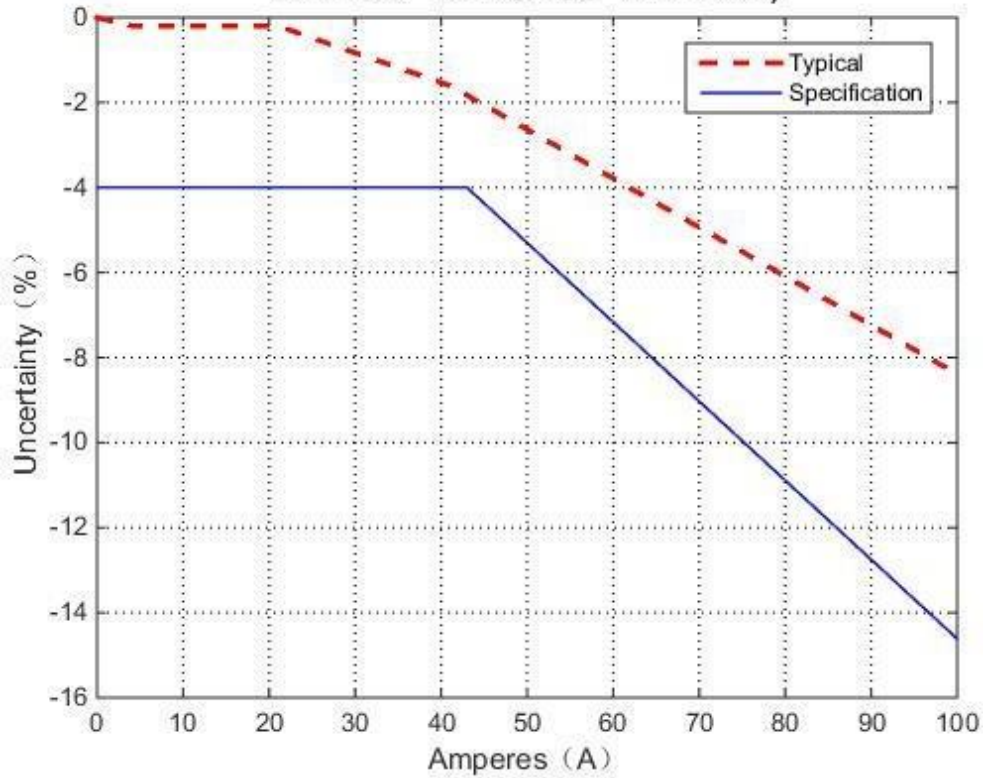

DC signal linearity

---

### **3. Instructions:**

1. Connect the BNC of the current probe to the oscilloscope (or other instrument) and connect the USB cable to power the current probe.
2. According to the current, select the appropriate range on the probe, the corresponding button light turns green.
3. Adjust the oscilloscope settings: input impedance  $1M\Omega$ ; Select current or set display unit as A; Set the probe attenuation multiplier of the corresponding channel. If the probe is  $100A(0.01V/A)$ , the oscilloscope should be 100X, if the probe is  $10A(0.1V/A)$ , oscilloscope is 10X.
4. Press the auto zero button to realize the auto zero adjustment of the probe. After the zero adjustment is successful, the buzzer will beep for once. Otherwise, the “beep” sound will be 3, indicating that the zero adjustment fails; The external magnetic field may have a slight influence on the DC zero of the probe. After the zero adjustment is completed, please do not move it in a large range.
5. Open the clamp of the current probe to clamp the conductor under test according to the direction indicated by the clamp head. Note: If the measured current flow direction is opposite to the direction indicated by the clamp head, the output is negative.
6. Adjust the oscilloscope to get the best waveform.  
Note: When the current exceeds the range, the buzzer will sound for a long time and the button light will flash.

### **5. Maintenance**

During the product warranty period and under normal use, the company will be responsible for free maintenance due to the failure of the product itself due to quality problems.

Please keep the product as dry, clean and tidy. If there is dirt, use a soft cloth or sponge with alcohol to remove dirt. Do not use water.

In order to ensure the performance of the product, it is recommended to conduct an inspection or calibration once a year.

---

Version	Modify content	release time
1.0	First release	2019.05

The information provided in this document is provided on an "as is" basis and is subject to change without notice in future editions. Further, Micsig disclaims all warranties, either express or implied, with respect to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, to the fullest extent permitted by applicable law. Micsig is not responsible for errors or accidental or consequential damages resulting from the furnishing, use, or use of this document or any information contained herein. In the event that a separate written agreement between Micsig and the user contains a warranty term covering the contents of this document, but the warranty terms conflict with those terms, the warranty terms in the separate agreement shall prevail.